




**SCHWINN® FITNESS**

## Schwinn® IC Bikes

IC Pro™, IC Elite™



### Assembly Manual

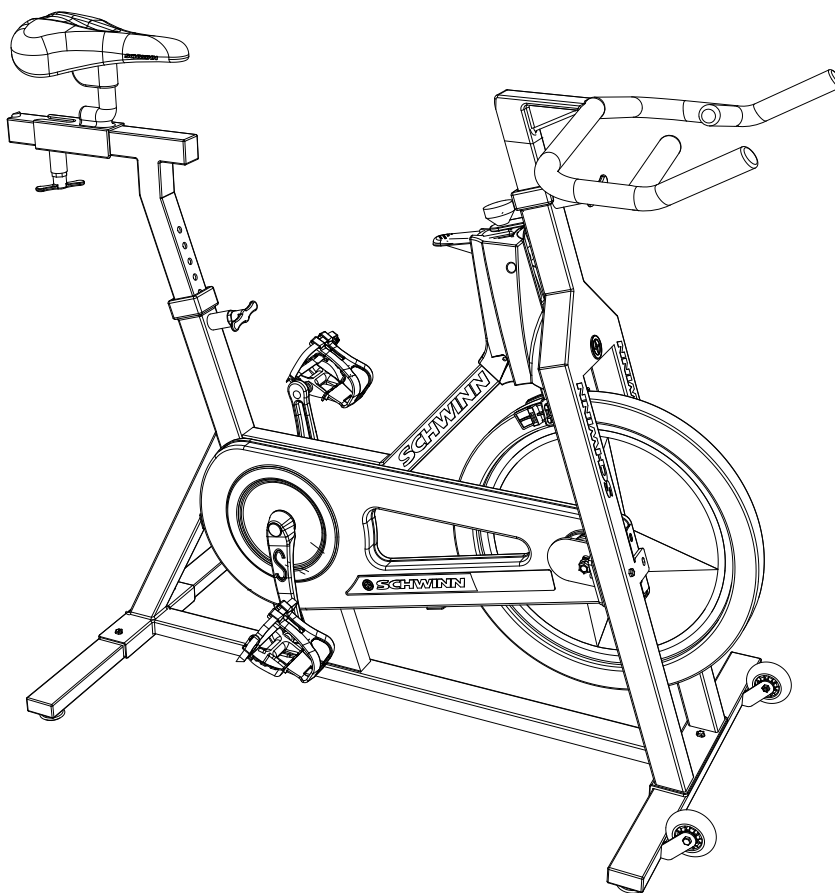

# ***Table of Contents***

---


Product Specifications	2
Safety Warnings	3
Exploded Drawing	4
Parts List	5
Assembly Steps	6
Contact Numbers	11

## ***Product Specifications***



Dimensions	50" L x 22.5" W x 39" H (127cm x 57cm x 99cm)
Assembled Unit Weight	119 lbs (54 kg)
Packaged Shipping weight	123 lbs (56 kg)
Workout Area	89" L x 61.5" W (227cm x 156cm)
Maximum User Weight	300 lbs (136 kg)

# Safety Warnings

---


 This icon means a potentially hazardous situation which, if not avoided, could result in death or serious injury.

## Before using this equipment, obey the following warnings:

-  Read and understand the complete Owner's Manual.
-  Read and understand all Warnings on this machine.

- Keep children away from this machine. Watch them closely when near the machine. Moving parts that appear dangerous to adults may not appear so to children.
- Consult a physician before starting an exercise program. Stop exercising if you feel pain or tightness in your chest, become short of breath, or feel faint. Contact your doctor before using the machine again.
- The flywheel momentum of the Schwinn® IC Bike will keep the pedals turning even after the rider stops pedaling or the rider's feet slip off. **DO NOT ATTEMPT TO DISMOUNT THE BIKE OR REMOVE YOUR FEET FROM THE PEDALS UNTIL BOTH THE PEDALS AND THE FLYWHEEL HAVE COMPLETELY STOPPED.** Failure to follow these instructions may lead to loss of control and serious personal injury.
- Examine this machine for loose parts or signs of wear. Contact Nautilus Customer Service for repair information. Use only genuine Schwinn® IC replacement parts supplied by Nautilus.
- Do not wear loose clothing or jewelry. This machine contains moving parts.
- Do not place fingers or any other objects into moving parts of the exercise equipment.
- Maximum user weight limit: 300 lb. (136 kg). Do not use if you are over this weight.
- Stabilize the pedals before stepping on them and use caution when stepping off the machine.
- Keep at least 19.7 inches (0.5 m) on each side of the machine clear. This is the recommended safe distance for access and passage around and emergency dismounts from the machine.
- Warn bystanders to keep a safe distance, at least 3 feet (1 m). Do not allow anyone to touch the operator while the machine is in motion.
- Keep the foot pedals clean and dry.
- Do not over exert yourself during exercise. Operate the machine in the manner described in this manual.

# Exploded Drawing

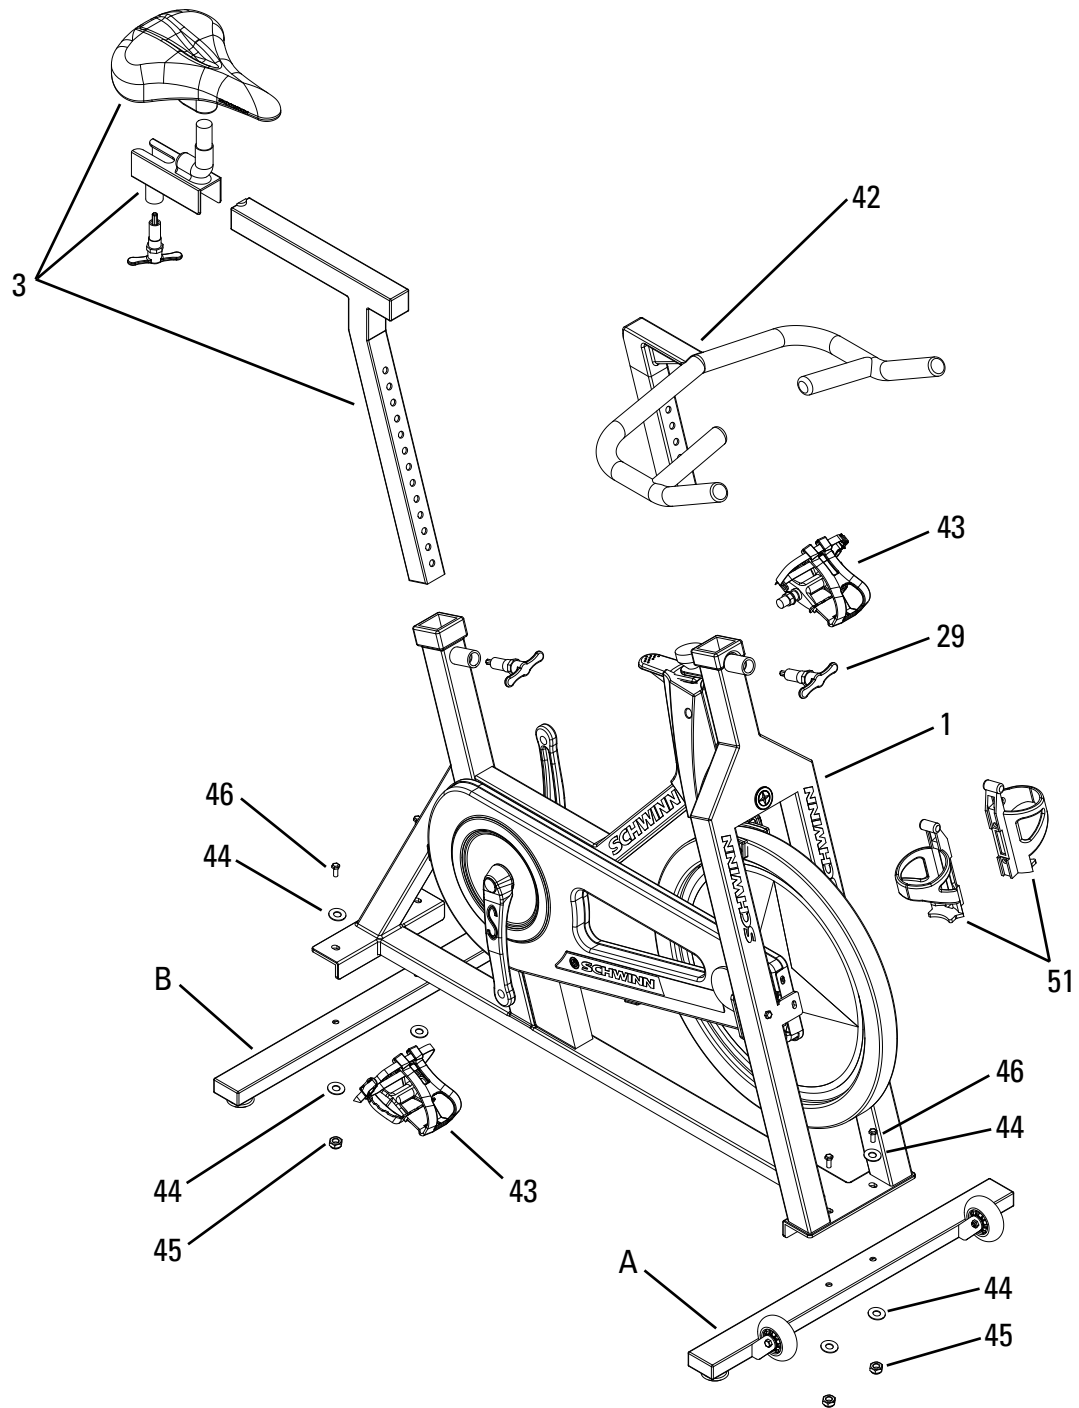

# Parts List

Ref. #	Description	Qty.
1	Frame	1
42	Handle Bar	1
3	Seat Slider Assembly with Saddle	1
A	Front Stabilizer Bar with Wheels and Feet	1
B	Rear Stabilizer Bar with Feet	1
51	Water Bottle Cage	2
	Small Parts Box	1

## Small Part Box Contents

43	Pedals with Toe Clips & Straps (Left & Right)	1 Pair
29	Pop Pin Assembly for Head Tube	1
46	13mm Hex Bolt	4
44	Flat Washer	8
45	13mm Lock Nut	4


## Tools Supplied

Stamped Steel 13/14/15/17mm Combination Wrench	1
3mm Hex Wrench	1


Prior to assembly of the product, remove all components from the packaging and check them against the packaged components list supplied above. Once you are certain that all the necessary parts have been supplied, begin with the first assembly step.

## Tools Needed

3mm Hex Wrench

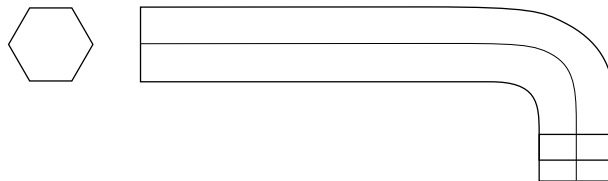

Stamped Steel Combination Wrench

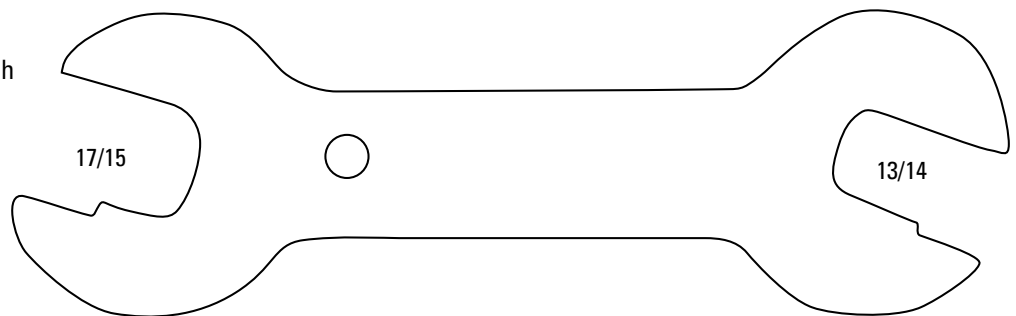

Adjustable wrench (not included)

Grease (not included)

# Assembly

## Step 1

Ref. #	Description	Qty
1	Frame	1
A	Front Stabilizer Bar with Wheels and Feet	1
B	Rear Stabilizer Bar with Feet	1
46	13mm Hex Bolt	4
44	Flat Washer	8
45	13mm Lock Nut	4

### Tools Required


Stamped Steel Combination Wrench	1
Adjustable wrench or 13mm Socket	1

### ATTENTION


The following steps utilize stainless steel hardware. Stainless steel hardware is susceptible to “cold welding”, also known as galling, if not handled properly. To reduce the chances for cold welding, make sure you apply grease to the threads at the end of the stainless hex bolts #46. When tightening the 13mm lock nuts #45, turn them at a fairly low rotational speed. High rotational speeds as well as lack of grease are common causes for cold welding of stainless steel hardware.

- A. Position the Front Stabilizer Bar (A) on the frame bracket as shown in the illustration.
- B. Make sure the adjustable feet are on the bottom and the transport wheels are facing up and toward the front of the bike.
- C. Attach Front Stabilizer Bar (A) to Frame (1) using two hex bolts (46), four washers (44), and two lock nuts (45). Tighten hardware firmly but do not over tighten as deformation of the stabilizer tube may occur
- D. At this time make sure that the adjustable feet with lock nuts are screwed fully into the stabilizer.
- E. Position the Rear Stabilizer Bar (B) on the frame bracket as shown in the illustration.
- F. Make sure the adjustable feet are on the bottom.
- G. Attach Rear Stabilizer Bar (B) to Frame (1) using two hex bolts (46), four washers (44), and two lock nuts (45). Tighten hardware firmly but do not over tighten as deformation of the stabilizer tube may occur
- H. At this time make sure that the adjustable feet with lock nuts are screwed fully into the stabilizer.

Front

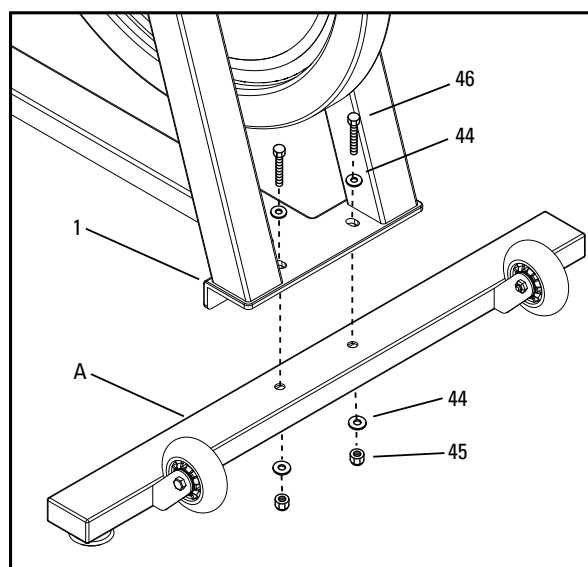

Rear

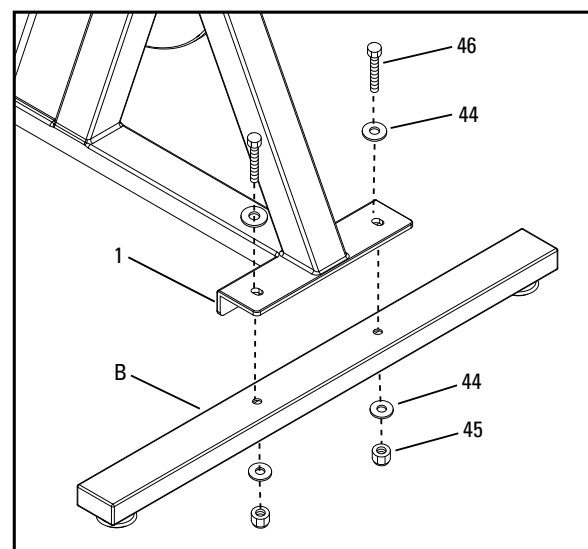

# Assembly

## Step 2


Ref. #	Description	Qty
1	Frame	1
29	Pop Pin Assembly for Head Tube	1
42	Handle Bar	1
7, 8, & 9	Seat Slider Assembly	1
51	Water Bottle Cage	2

### Tools Required

3mm Hex	1
Adjustable wrench	1

- A. Using your hand, grab the T-handle of the Pop Pin attached to the seat tube of the frame. Turn the Pop Pin counter clockwise for several revolutions to make sure it is free of the securing threads and can be pulled freely.
- B. Pull the entire seat slider assembly (7,8,9) from the frame and reverse its direction. Reinsert the seat slider assembly into the frame (with the holes facing the front of the bike) while pulling out on the Pop Pin. Release the Pop Pin and make sure it fully engages one of the holes provided in the seat post.
- C. Using the stamped steel combination wrench supplied, loosen up the 14mm nuts that secure the saddle bracket to the seat slider (8). Once loose, rotate the saddle so that the nose of the saddle is facing the handle bars and is level with the ground or in your desired position. Tighten the 14mm nut securely and manually attempt to twist the saddle sideways to confirm that it is secure before riding.
- D. Remove the Pop Pin Assembly (29) from the small parts bag and add some grease to the threads of the large 21mm nut that will screw into the head tube boss on the bike.
- E. Thread the Pop Pin Assembly (29) into the head tube boss using a large adjustable wrench and tighten firmly.
- F. Using your hand, grab the T-handle of the Pop Pin, turn it counterclockwise for several revolutions to make sure it is free of the securing threads and can be pulled freely.
- G. Insert the handle bar (42) into the head tube of the bike while pulling the Pop Pin out. Lower the handle bar to the desired height and release the Pop Pin. Make sure the Pop Pin fully engages one of the holes provided in the handle bar. Turn the T-handle of the Pop Pin clockwise until it is fully tightened, this will secure the handle bar firmly at the desired height.

- H. Using the 3mm hex tool supplied, mount the two water bottle cages (51) to each side of the fork legs. The necessary mounting screws have previously been installed and must be removed from the fork legs prior to securing the water bottle cage.

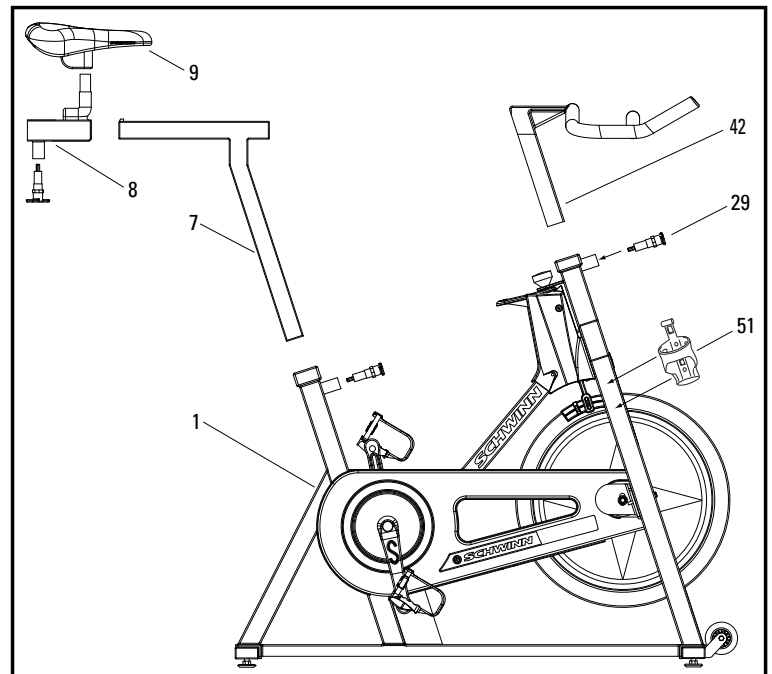

# Assembly


## Step 3

Ref. #	Description	Qty
1	Frame	1
43	Pedals with Toe Clips & Straps (Left & Right)	1 Pair

### Tools Required

Stamped Steel Combination Wrench	1
----------------------------------	---

- A. Remove Pedals (43) from the small parts box and look at the ends of the pedal threads. You will notice that each pedal is marked with an "R" or an "L" on the very end of the spindle past the threads. This mark indicates which side of the bike the pedal is intended to mount. This is important since the thread directions are different for each pedal.
- B. Locate the Pedal that has the "R" on the spindle. This pedal is for the right side crank arm of the bike (chain guard side) and is right hand threaded (turn clockwise to tighten). It is a good idea to apply grease to the threads before attaching them to the crank, this will assure that they can be removed in the future. Using the supplied Combination Wrench thread the right Pedal on to the crank arm, tighten firmly.
- C. Locate the Pedal that has the "L" on the spindle. Follow the directions in step B. however, you will need to turn the spindle left (counterclockwise) to tighten as the "L" spindle is reverse threaded.

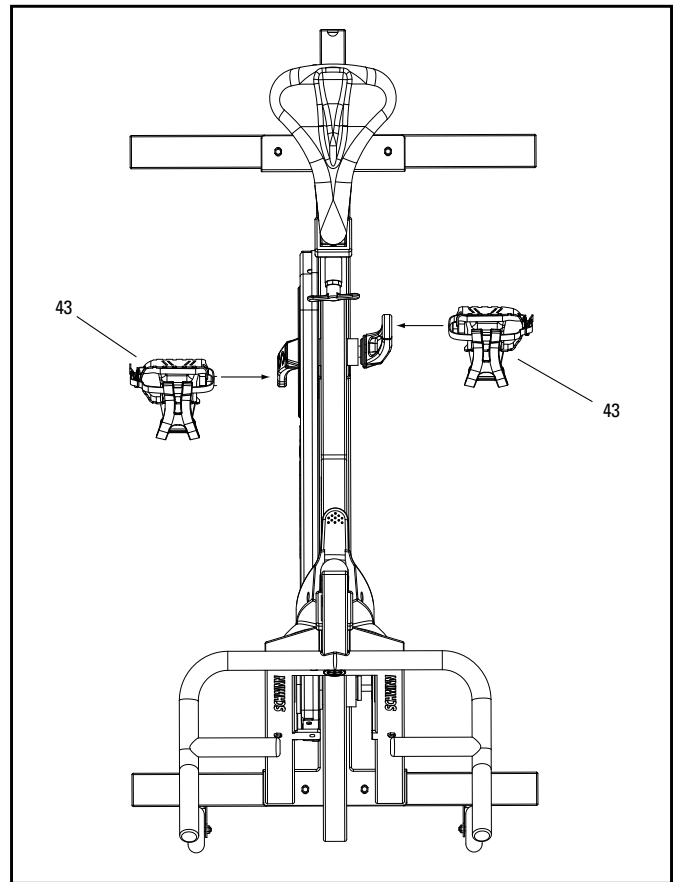



# ***Assembly/Initial Setup Adjustments***

---

## **Step 4 - Final Inspection**

- A. Tighten all hardware.
- B. Read warnings on machine.

Please read and refer to the Owner's Manual for:

- Operating Instructions
- Maintenance Instructions
- Warranty Information.



Failure to visually check and test assembly before use can cause damage to the equipment. It can also cause serious injury to users and bystanders.

**To assure optimal performance and longevity, perform the following steps prior to placing your IC bike into service.**

A. Move bike into its final location. Confirm that all four feet are firmly in contact with the floor and that the bike is stable. If any of the feet are not making full contact, it is recommended that you adjust them by turning the entire foot assembly counterclockwise which will extend it further from the stabilizer bar. Once the foot is in full contact and the bike is stable, thread the jam nut clockwise until it comes into contact with the stabilizer at the point the foot assembly threads in. Tighten the jam nut snug using an adjustable wrench. This will secure the foot at the desired height.

B. With the resistance adjustment knob turned fully in the counterclockwise position (no brake contact with flywheel), it is recommended that you soak the brake pads with Schwinn® Fit-Tech Lube. This will extend the life of the brake pads and assure a smooth resistance interface with the flywheel.

C. Once the pads are lubricated, it is recommended that you tighten the resistance adjustment knob clockwise to tighten the brake pads against the flywheel surface. Do this until the brake pads are firmly clamped against the flywheel. This will set the brake parts and give the springs some initial compression. This process will also assure that the Fit-Tech Lube penetrates the entire brake pad surface.

D. Confirm that the Saddle is positioned in the desired location on the saddle mounting bracket. If the angle of the saddle or the fore/aft position of the saddle needs to be adjusted, use the Combination Wrench to loosen the 14mm nuts on either side of the saddle mounting bracket. This will allow you to adjust the tilt angle and fore/aft position of the saddle. Once in the correct position, tighten both 14mm nuts on the saddle mounting bracket with the Combination Wrench.

**That's it! Initial set up is complete and you can now enjoy all these features and quality of your new Schwinn® IC Bike!**

# ***Assembly***

---

This page intentionally left blank.

# Contact Numbers

---

## OFFICES IN THE UNITED STATES:

**E-mail: [customerservice@nautilus.com](mailto:customerservice@nautilus.com)**

### TECHNICAL/CUSTOMER SERVICE

Phone: 800-NAUTILUS (800-628-8458)

Fax: (877) 686-6466

E-mail: [cstech@nautilus.com](mailto:cstech@nautilus.com)

### CORPORATE HEADQUARTERS

Nautilus, Inc.

World Headquarters

16400 SE Nautilus Drive

Vancouver, Washington, USA 98683

Phone: (800) NAUTILUS (800) 628-8458

## INTERNATIONAL OFFICES:

For technical assistance and a list of distributors in your area, please call or fax one of the following numbers.

### INTERNATIONAL CUSTOMER SERVICE

Nautilus International S.A.

Rue Jean Prouvé

1762 Givisiez / Switzerland

Tel: (41) (26) 460 77 77

Fax: (41) (26) 460 77 70

E-mail: [technics@nautilus.com](mailto:technics@nautilus.com)

### GERMANY and AUSTRIA

Nautilus Deutschland GmbH

Albin-Köbis-Str. 4

51147 Köln

Tel.: (49) 02203 2020 0

Fax: (49) 02203 2020 45 45

### ITALY

Nautilus Italy S.r.l., Via della Mercanzia, 103

40050 Funo di Argelato - Bologna

Tel: (39) 051 664 6201

Fax: (39) 051 664 7461

### SWITZERLAND

Nautilus Switzerland SA

Rue Jean-Prouvé 6,

CH-1762 Givisiez

Tel: (41) 026 460 77 66

Fax: (41) 026 460 77 60

### UNITED KINGDOM

Nautilus UK Ltd

Nautilus UK, 4 Vincent Avenue,

Crownhill, Milton Keynes, Bucks, MK8 0AB

Tel: (44) 1908 267 345

Fax: (44) 1908 567 346

### CHINA

Nautilus Representative Office

Nautilus, Shanghai, 7A No.728, Yan'an Rd(West)

200050 Shanghai, China

Tel: (86) 21 523 707 00

Fax: (86) 21 523 707 09



***SCHWINN® FITNESS***

©2007. Nautilus, Inc. All rights reserved. Nautilus, the Nautilus Logo, Universal, Bowflex, StairMaster, Pearl Izumi, Nautilus Institute, IC Pro and IC Elite are either registered trademarks or trademarks of Nautilus, Inc. Schwinn and the Schwinn Quality Seal are registered trademarks. All other trademarks are owned by their respective companies. Nautilus, Inc., World Headquarters, 16400 SE Nautilus Drive, Vancouver, WA 98683 1-800-NAUTILUS [www.nautilus.com](http://www.nautilus.com)

Printed in China

Nautilus®

Bowflex®

Schwinn® Fitness

Pearl Izumi®

StairMaster®

Universal®

Nautilus Institute®